

Flo-Torq Reflex Drive Hub Installation

Installing the Drive Sleeve into the Propeller


1. Assemble the drive sleeve with the aft drive sleeve. Ensure there is no gap between the drive sleeve and the aft drive sleeve.



2. Insert the drive sleeve assembly onto the propeller and push the drive sleeve assembly onto the propeller.



3. Install the aft washer onto the drive sleeve assembly and lightly tap the drive sleeve assembly into the propeller. The aft washer will contact the propeller when the drive sleeve assembly is properly seated.

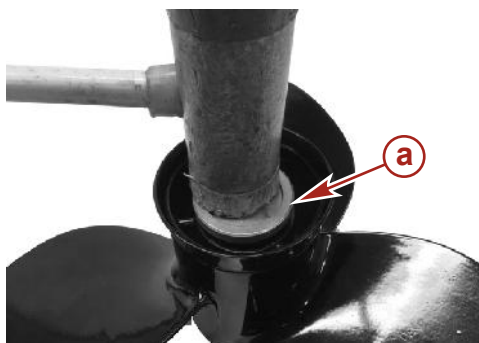

a - Aft washer

IMPORTANT: The Flo-Torq Reflex drive hub requires the use of the thrust washer that is included with the drive hub kit.